


SS-300-MED


Air Volume: 50 to 350 CFM
Weight: 40lbs to 50lbs

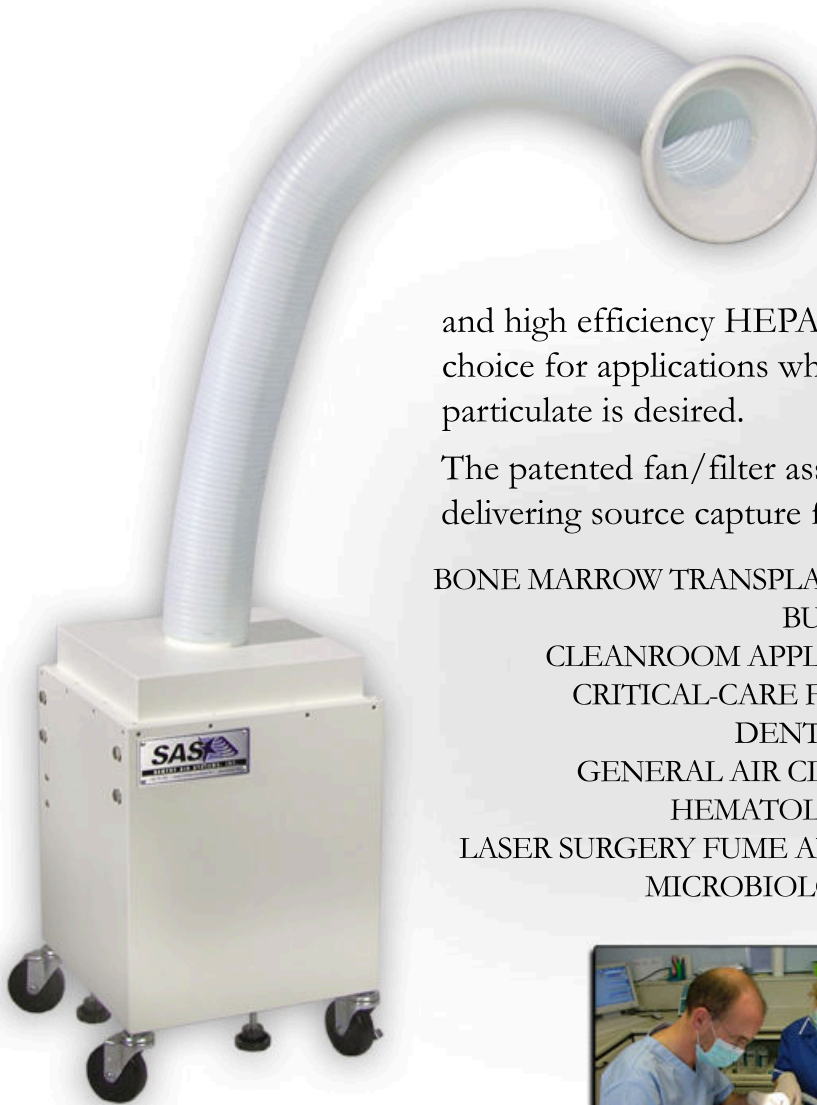

The Portable Floor Sentry combines small size, quiet operation, convenient mobility, and high efficiency HEPA/ULPA filtration to provide an excellent choice for applications where filtration of airborne solids and liquid particulate is desired.

The patented fan/filter assembly provides strong suction at the inlet delivering source capture for a variety of applications such as:

- | | |
|------------------------------|-------------------------------|
| BONE MARROW TRANSPLANT UNITS | NEONATAL INTENSIVE CARE UNITS |
| BURN UNITS | ODOR SENSITIVE AREAS |
| CLEANROOM APPLICATIONS | ONCOLOGY WARDS |
| CRITICAL-CARE FACILITIES | DENTAL LABORATORIES |
| DENTAL AREAS | ORGAN TRANSPLANT WARDS |
| GENERAL AIR CLEANSING | PEDIATRIC ISOLATION ROOMS |
| HEMATOLOGY ICUS | PHARMACIES |
| LASER SURGERY FUME AND ODOR | RESPIRATORY SENSITIVITIES |
| MICROBIOLOGY LABS | TB-ISOLATION WARDS AND |

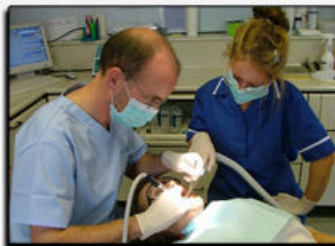

Medical/Dental Contaminants



Fume/Chemical Extraction

Features

- Self-Supportave Flex Arm
- Lightweight & Compact Size
- HEPA/ULPA or Other Filters
- Variable Speed Controller
- Durable Construction
- Heavy-Duty Casters

Options

- Hour Counter
- Magnehelic Gauge
- Variety of Mounting Options
- Various Filter Options

Technical Specifications

| Cabinet Dimensions | Arm Dimensions | Cabinet Material | Electrical | Sound Level |
|-------------------------|-------------------------------------------------|----------------------------------------------------------------|----------------------------|---------------------|
| 13" D 13" W 16" H | 4" Round 45" to 58" Long w/ 7" Round Hood | 16 ga Carbon Steel w/ Polyester Epoxy Coating on Surface | 115/1/60 Approx. 2 amps | 58 dba to 66 dba |

Limited one year warranty from date of shipment on defects due to materials or workmanship.
All specifications are nominal and subject to change without notice.
Not intended for explosive or highly combustible applications.