

Model 200/225 Smoke Sentry

Model # SS-200/225-SMK



The **Smoke Sentry Fume Extractor** offers an effective, quiet and economical solution for businesses and homeowners looking to remove odorous cigarette smoke and tobacco odor. This compact, portable smoke extractor pulls up to 91 CFM of contaminated air through **HEPA** and **Carbon filters** where the air is filtered of hazardous particulate commonly found in smoke haze.

Unique to many smoke eliminators on the market, the **Smoke Sentry** is constructed of high quality, commercial-grade materials designed for longevity and durability. The **Smoke Sentry** can handle continuous running without overheating, and maintenance is as simple as an occasional wipe down and filter change.

Position the **Smoke Sentry** near an ashtray for source capture extraction or set it on a table or bar for ambient smoke and vapor removal. By removing most of the harmful smoke and liquid cigarette odor/particulate from the air, a room is more appealing to customers, employees and guests.

As a companion to the **Smoke Sentry**, our line of portable and free-hanging room air cleaners offer added air filtration for indoor spaces.



Model 200/225 Smoke Sentry

Applications

- Game Halls
- Restaurants
- Bars
- Clubs
- Casinos
- Cigar Lounges
- Residences
- Casinos

Product Features

- **Includes:** variable speed controller (115V only)
- **Optional:** hour counter
- Highly portable and lightweight
- Quiet, reliable, low maintenance operation
- Sturdy construction
- Simple, quick “no tool” filter change
- Long filter life

Benefits

- Captures most harmful cigarette and tobacco smoke.
- Removes most of airborne particulates.
- Helps create a more appealing environment for customers and employees.




21221 FM 529 Rd, Cypress, TX 77433
1.800.799.4609 • sales@sentryair.com

www.sentryair.com

Smoke & Odor Removal

Product Specifications

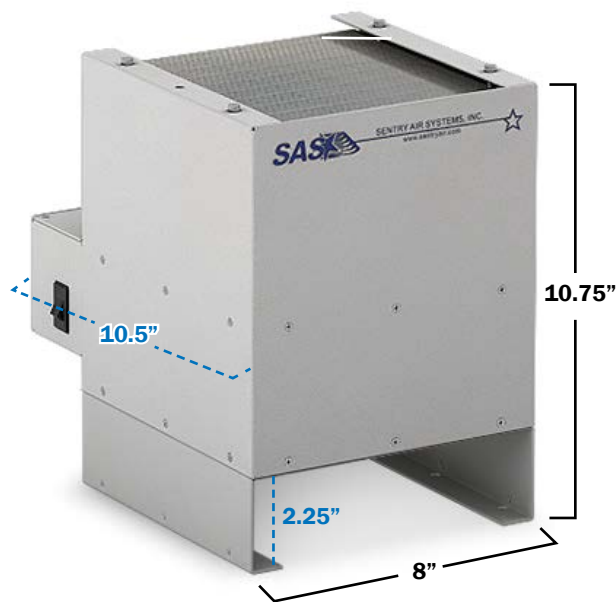

Dimensions are approximate.



21221 FM 529 Rd
Cypress, TX 77433
1.800.799.4609
sales@sentryair.com

www.sentryair.com

Base Unit Dimensions	Length: 10.5" (includes control box) Width: 8" Height: 10.75"
Slot Dimensions	2.25"
Cabinet Material	16 ga. carbon steel
Weight	Approx. 12 lbs.
Air Volume (approximately)	95% ASHRAE: 200: up to 100 CFM 225: up to 130 CFM Pre-Filter + 2.5# Carbon: 200: up to 50 CFM
Electrical	200: 115/1/60, 0.3 amps 220/1/50, 0.2 amps 225: 115/1/60, 0.46 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (High at 3' from inlet)	200: Approx. 56 dba 225: Approx. 64 dba
Main Filter Options	200 - Chemical: Activated Carbon Specialty-Blended Filter Media [i.e. acid gas, mercury, aldehyde, and ammonia] 225 - Particulate: HEPA [up to 99.97% efficiency on particles 0.3 microns and larger] ASHRAE [up to 95% efficiency on particles 0.5 microns and larger]
Patent #	5,843,197