

Heavy Duty Wall Mount Bracket

Model # SS-4567-WMB

Product Specifications

DIMENSIONS

15.75" From Wall x 18.5" Wide x 2" Tall

WEIGHT

Approx. 18 lbs.

MATERIAL

.188 A36 Steel

COMPATIBILITY

4" Diameter

Black Flex Sentry (48" L)

Python Sentry (12' L or 25' L)

5" Diameter

Black Flex Sentry (68" L)

6" Diameter

Black Flex Sentry (72" L)

Python Sentry (12' L or 25' L)

7" Diameter

Hybrid Arm (7' L)


HD Arm (10' L)

8" Diameter

Customer-Supplied Ductwork

WARRANTY

Limited two-year warranty from date of shipment on defects due to materials or workmanship.

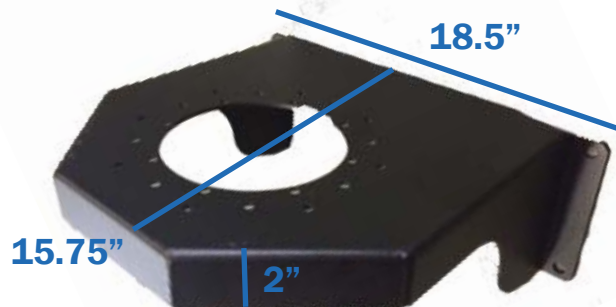

Wall Mount Bracket with 10' L HD Arm ducted to a Model 550 Industrial Fume Extractor

The **Heavy Duty Wall Mount Bracket** is designed to mount directly to a wall with the ability to attach a variety of one of our source-capture fume arms. A series of adapter collars coupled with multiple hole patterns make the bracket modular depending on the arm type needed.

The arm attaches underneath the bracket while ductwork attaches to the top of the bracket via an adapter collar. Depending on customer needs, the ductwork can vent to the outside, tie into an existing exhaust system or even attach to our Model 550 Industrial Air Cleaner (see picture above).

Our Fume Extractor Stand is also available for applications that do not require wall mounting. SAS Air Cleaners are able to mount to the top of the stand.



1.800.799.4609
www.sentryair.com
sales@sentryair.com

